# **5,000 BTU/H** CMW051C



### **Specifications**


Cooling Capacity BTUH	5,000	
Approx. Sq. Ft. Cooling	100-150	
EER	11	
Heating Capacity BTUH (electric)	DNA	
Power Supply	115/60/1	
Humidity Removal Pts/Hr	1.26	
Ventilation Control	NO	
Fan Only	YES	
Fan Speeds Cool/Fan	2	
Air Delivery Max. CFM	141	
dB Level (hi/med/low)	54/50	
Amps Cooling	3.9	
Amps Heating	DNA	
Maximum Fuse Size	15	
Power Cord	5-15P	
Window Mounting Kit	YES	
Remote Control	NO	
Max Wall Thickness	5"	
Shipping Weight (lbs.)	41.89	
Dimensions (in.) Height	15.82	
Width	18.15	
Depth	16.85	

#### **Features**

- Mechanical Control
- Adjustable Thermostat
- Easy Access filter for cleaning reminder
- 2 Fan speeds
- 4-Way air direction
- Window kit included
- R32 Environmental-friendly refrigerant

## ROOM AIR CONDITIONER



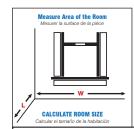





#### Selection Guide - Guide de sélection

Area to be Cooled - Zone à refroidir		
Square Feet to be conditioned pieds carrés	Square Meters to be conditioned mètres carrés	Capacity Needed (BTUH) Capacité nécessaire
100 - 150	9.3 - 13.9	5,000
150 - 250	13.9 - 23.2	6,000
250 - 300	23.2 - 27.9	7,000
300 - 350	27.9 - 32.5	8,000
350 - 400	32.5 - 37.2	9,000
400 - 450	37.2 - 41.8	10,000
450 - 550	41.8 - 51.1	12,000
550 - 700	51.1 - 65.1	14,000
550 - 700	51.1 - 65.1	15,000
700 - 1,000	65.1 - 92.9	18,000
1,000 - 1,200	92.9 - 111.5	21,000
1,200 - 1,400	111.5 - 130.1	23,000
1,400 - 1,500	130.1 - 139.4	25,000
		Specifications from www.energystar.go

Heavily shaded room - reduce capacity by 10% Chambre très ombragés - une capacité réduite de 10% Sala muy sombreada - reducir la capacidad en un 10%

Very sunny room - increase capacity by 10% Chambre très ensoleillée - Augmentation de la capacité de 10% Habitación muy soleada - aumentar la capacidad en un 10%

Use in kitchen - increase capacity by 4,000 BTUs
Utiliser dans la cuisine - Augmentation de la capacité de 4,000 BTUs
Uso en la cocina: aumente la capacidad en 4,000 BTU

More than two people regularly use the room - add 600 BTUs for

each additional person
Plus de deux personnes utilisent régulièrement la salle - Ajouter 600
BTUs pour chaque personne suppliementaire
Mais de dos personas usan la sala con regularidad: agregue 600
BTU por cada persona adicional

To calculate square footage - multiply WIDTH x LENGTH Pour calculer la superficie en pieds carrés, multiplier la - la par la longueur Para calcular pies cuadrados, multiplique ANCHO x LONGITUD



**MULTI-DIRECTIONAL** 



